

KICK NEKXA BUDS X10 ANC

User Manual



Welcome

Please take some time to read our user manual carefully and retain it for future reference.

Warning

Read the below warning thoroughly before you start using your headset. Store this manual with product packaging. The safety precaution manual reduces the risk of fire or injury when correctly complied to.

To reduce the risk of injury:

Keep batteries out of reach of children.

Do not heat, open, or dispose of battery pack in fire.

Do not allow metal objects to touch the battery on the device.

Do not expose battery pack to excessive heat.

Product Specification

- Product model: KICK NEKXA BUDS X10
- Bluetooth Chipset: JL7003
- Bluetooth version: V5.3+BR+EDR+BLE
- Bluetooth decoding: SBC, AAC
- Bluetooth working frequency: 2.402GHz-2.480GHz
- Frequency response: 20Hz-20KHz
- Speaker size: 13mm
- Sensitivity: 101dB \pm 2dB S.P.L at 1KHz
- Speaker impedance: 32 Ω \pm 5% at 1mW / 1000Hz
- Microphone specifications: 2718
- Mic sensitivity: -42 \pm 1dB

- Effective distance: 10m (in an ideal environment without any large obstacles)
- Earphones battery capacity: 40mAh
- Charging case battery capacity:300mAh (45hrs Backup)
- Playtime: ANC ON: 5.5 hrs 70%volume, ANC Off: 6.5 hrs 70%volume. (High quality music and volume may accelerate battery consumption)

Paring

1: Auto Pairing

Opening the charging case and take earphones out, and then the earphones will automatically turn on and pair, earphone flash cool blue light 1 time every 1 second, open up Bluetooth setting on your smart device and scan for **KICK NEKXA BUDS X10 ANC**, the 2 Earbuds will pair with your device successfully. **(Please be noted that the earbuds will automatically power off if they are not paired to any device in about 5 minutes)**

Operation

1: Power on/off

a: Open the charging case and take out earphones, automatically turn on;

Place earphones into charging case and close the case, automatically turn off.

b: Long press 3 seconds to power on.

Long press 5 seconds to power off.

2: Play/Pause music

When listening to music.

Tap left/right earphones once to play or pause the music.

3: Increase /Decrease Volume

When listening to music.

Quick double tap left earphone to decrease Volume.

Quick double taps right earphone to increase Volume.

4: Previous /Next Song

When listening to music.

Triple tap left earphones to go to previous song.

Triple tap right earphones to go to next song.

5: ANC Mode

When taking the earphones out of the charging case, it is regular Bluetooth mode.

Long press right earphone for 2 seconds to enter **Transparency mode**;

Long press right earphone for 2 seconds again to enter **Noise reduction mode**;

Long press right earphone for 2 seconds again to enter **Regular Bluetooth mode**.

6: Answer/Hang up

When there is an incoming call.

Tap left or right earphones once to answer the call.

Tap left or right earphones again to end the call.

7: Reject

When there is an incoming call.

Long press left or right earphones to reject the call.

8: Voice assistant

Long press left earphones for 2 seconds to activate voice assistant.

Charging Function

Fully charge the case and earphones before using for the first time.

1: Charging the charging case

(a) There is a Type-C cable included in the packaging. Connect it to the Type-C charging port and the other end into a USB powered source to charge your case (Recommended to use a 5Watts Charger).

(b) Red light will flash to indicate charging has begun.

(c) Once fully charged, the red light stays firm.

2: Earphone charging

When battery is low, it will turn off when the earphones completely out of battery.

(a) Place the earphones into the charging case.

(b) Red light on the earphones turns on when charging has begun. The light will turn off when charging is complete.